 



FERDOWSI TYPE 1

TRAID SHOW

- 3. mP
- Column
- Electrical Panel



Untransferable

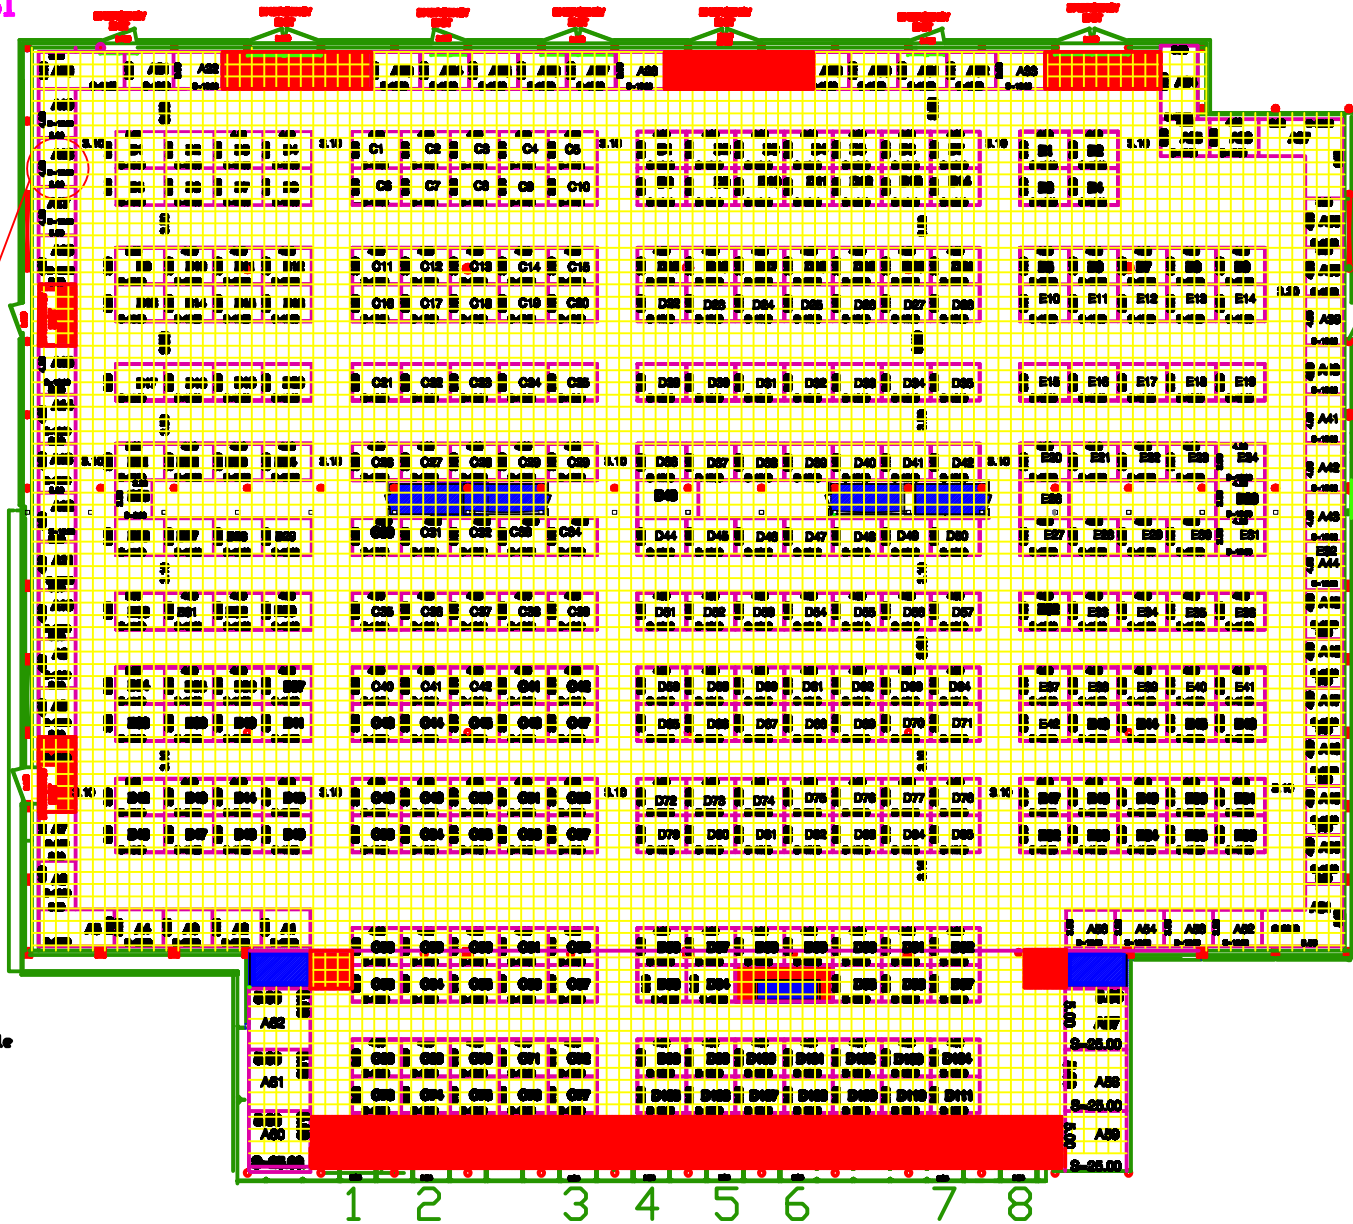

1 2 3 4 5 6 7 8